



Sensor Activated Flushometers





Description

Exposed, Sensor Activated Royal* Model Urinal Flushometer with True Mechanical Override, for %" top spud urinals.

Flush Cycle

□ Model 186-1.0 ES-S TMO Low Consumption (1.0 gpf/3.8 Lpf) □ Model 186 ES-S TMO Water Saver (1.5 gpf/5.7 Lpf)

Specifications

Quiet, Exposed, Diaphragm Type, Chrome Plated Urinal Flushometer with the following features:

- PERMEX™ Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass
- OPTIMA® EL-1500 Self-Adaptive Infrared Sensor with Indicator Light
- "Walk By" Delay of Eight (8) Seconds Prevents Unintentional Flushes
- User Friendly Three (3) Second Flush Delay
- Non-Hold-Open True Mechanical Override
- Non-Hold-Open Integral Solenoid Operator
- Die Cast Sensor Cover Plate with no visible Fasteners (for 2-gang Electrical Box)
- ¾" I.P.S. Screwdriver Bak-Chek® Angle Stop
- Free Spinning Vandal Resistant Stop Cap
- Adjustable Tailpiece
- High Back Pressure Vacuum Breaker Flush Connection with One-Piece Bottom Hex Coupling Nut, Spud Coupling and Flange for ¾" Top Spud
- Sweat Solder Adapter with Cover Tube and Cast Wall Flange with Set Screw
- High Copper, Low Zinc Brass Castings for Dezincification Resistance
- Non-Hold-Open Integral Solenoid Operator, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- Flush Accuracy Controlled by CID[™] Technology
- Diaphragm, Stop Seat and Vacuum Breaker molded from PERMEX™ Rubber Compound for Chloramine Resistance

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037. Installation conforms to ADA requirements.

Accessories

🗆 EL-154	Transformer (120 VAC/24 VAC 50 VA)
EL-342	Transformer (240 VAC/24 VAC 50 VA)

See Accessories Section and OPTIMA® Accessories Section of the Sloan catalog for details on these and other OPTIMA® Flushometer variations.

Fixtures

Consult Sloan for Sloan brand matching fixture options.

This space for Architect/Engineer approval		
Job Name	Date	
Model Specified	Quantity	
Variations Specified		
Customer/Wholesaler		
Contractor		
Architect		



Automatic

Sloan OPTIMA[®] equipped Flushometers provide the ultimate in sanitary protection and automatic operation. There are no handles to trip or buttons to push. The Flushometer operates by means of an infrared sensor that adapts to its surrounding. Once the user enters the sensor's effective range and then steps away, the Flushometer Solenoid initiates the flushing cycle to flush the fixture.

Hygienic

User makes no physical contact with the Flushometer surface. Helps control the spread of infectious diseases. 24-Hour Sentinel Flush keeps fixture fresh during periods of nonuse.

Economical

Automatic operation provides water usage savings over other flushing devices. Reduces maintenance and operation costs.

Practical

Solid state electronic circuitry assures years of dependable, trouble-free operation. The operational components of the Flushometer are identical to a handle activated Royal[®] Flushometer, proven by over 100 years of experience.

Warranty

3 year (limited)

Patent Pending





☑ Description

Exposed, Sensor Activated Royal® Model Urinal Flushometer with True Mechanical Override, for ¾" top spud urinals.

 \boxtimes

⊠ Flush Cycle


 \boxtimes

Model 186-1.0 ES-S TMO Low Consumption (1.0 gpf/3.8 Lpf)
Model 186 ES-S TMO Water Saver (1.5 gpf/5.7 Lpf)

ELECTRICAL SPECIFICATIONS

- Control Circuit Solid State 24 VAC Input 24 VAC Output 8 Second Arming Delay 24-Hour Sentinel Flush
- ☑ OPTIMA® Sensor Range Nominal 15" - 30" (381 mm - 762 mm) Self-adaptive Window ± 8" (203 mm)
- Solenoid Operator 24 VAC, 50/60 Hz
 - Transformer Sloan Part #EL-154 120 VAC, 50/60 Hz Primary 24 VAC, 50/60 Hz Secondary Class II, UL Listed, 50 VA.


Sloan Part #EL-342 240 VAC, 50/60 Hz Primary 24 VAC, 50/60 Hz Secondary Class II, UL Listed, 50 VA.

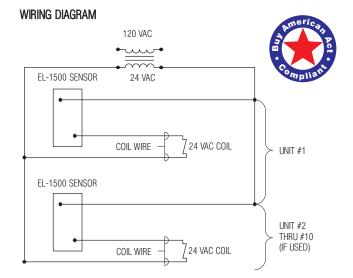


One Transformer serves up to ten (10) OPTIMA® Closet/Urinal Flushometers. Specify number of transformers required accordingly.

OPERATION


 A continuous, invisible light beam is emitted from the OPTIMA[®] Sensor.




 As the user enters the beam's effective range (15" to 30") the beam is reflected into the OPTIMA® Scanner Window and transformed into a low voltage electrical circuit. Once activated, the Output Circuit continues in a "hold" mode for as long as the user remains within the effective range of the Sensor.

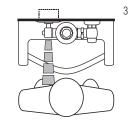


3. When the user steps away from the OPTIMA® Sensor, the circuit immediately initiates an electrical "onetime" signal that operates the Solenoid. This initiates the flushing cycle to flush the fixture. The Circuit then automatically resets and is ready for the next user.



ROUGH-IN

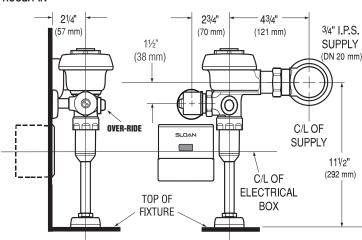

ELECTRICAL BOX INSTALLATION

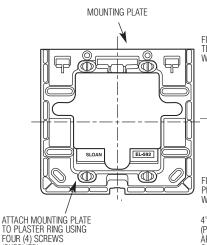

(SUPPLIÉD)

4" (102 mm) SQ. x 2-1/2" (64 mm) DEEP OUTLET BOX — APPLETON ELECT. #4SD1 OR EQUAL (BY CONTRACTOR) FINISHED VALL FINISHED PLATE WALL FINISHED PLATE WALL OVER PLATE VALL OVER PLATE VALL OVER VALL OVER OV

4" (102 mm) SQ. BOX DEVICE COVER (PLASTER RING) 3/4" (19 mm) HIGH — APPLETON ELECT. #8470 OR EQUAL (BY CONTRACTOR)

Air Delights 1170 SW 5TH STREET, SUITE 100 - BEAVERTON, OR 97005 PHONE: 1-800-440-5556 - FAX: 1-503-643-8224 http://www.airdelights.com - Customer_Service@AirDelights.com

